



HOW TO SYNC REMOTE

1. Double click the Link button as shown until the LED light on the control box turns on. Release the button and the LED light will turn on.
2. Simultaneously press and hold the Head Up and Foot Up buttons until the remote's backlight starts flashing. When the LED light on the control box turns off and the remote backlight stops flashing, release the two buttons.
3. Test the bed to make sure it is working, and repeat the steps if it is not.