


# GLIDEAWAY

## INSTRUCTIONS FOR NO. BL1 "BIG LIFT"

Glideaway's "BIG LIFT" Universal Center Support, used on angle iron bed frames.

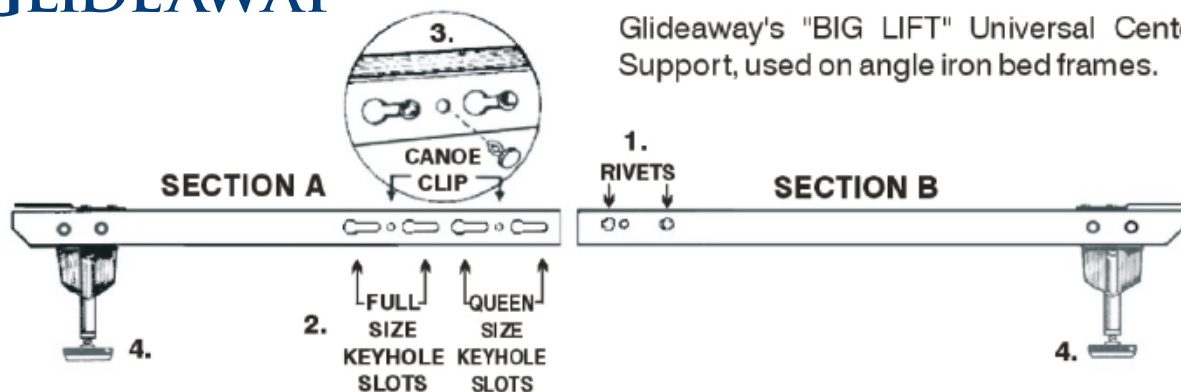

1. Place rivets of section B through proper keyhole slots in Section A for desired bed frame width.
2. Pull rivets of Section B outward through key hole slots in Section A to end of slots.
3. Put canoe clip through hole to lock in place.
4. Insert nylon socket with glide into legs.
5. Swing "BIG LIFT" on to center of side rails of bed frame.
6. Adjust glides to float just off the floor.

