


STEEL BED FRAMES

BL1 "BIG LIFT"

To learn more about your product or its warranty, call **855.581.3095** or visit us online at glideaway.com.

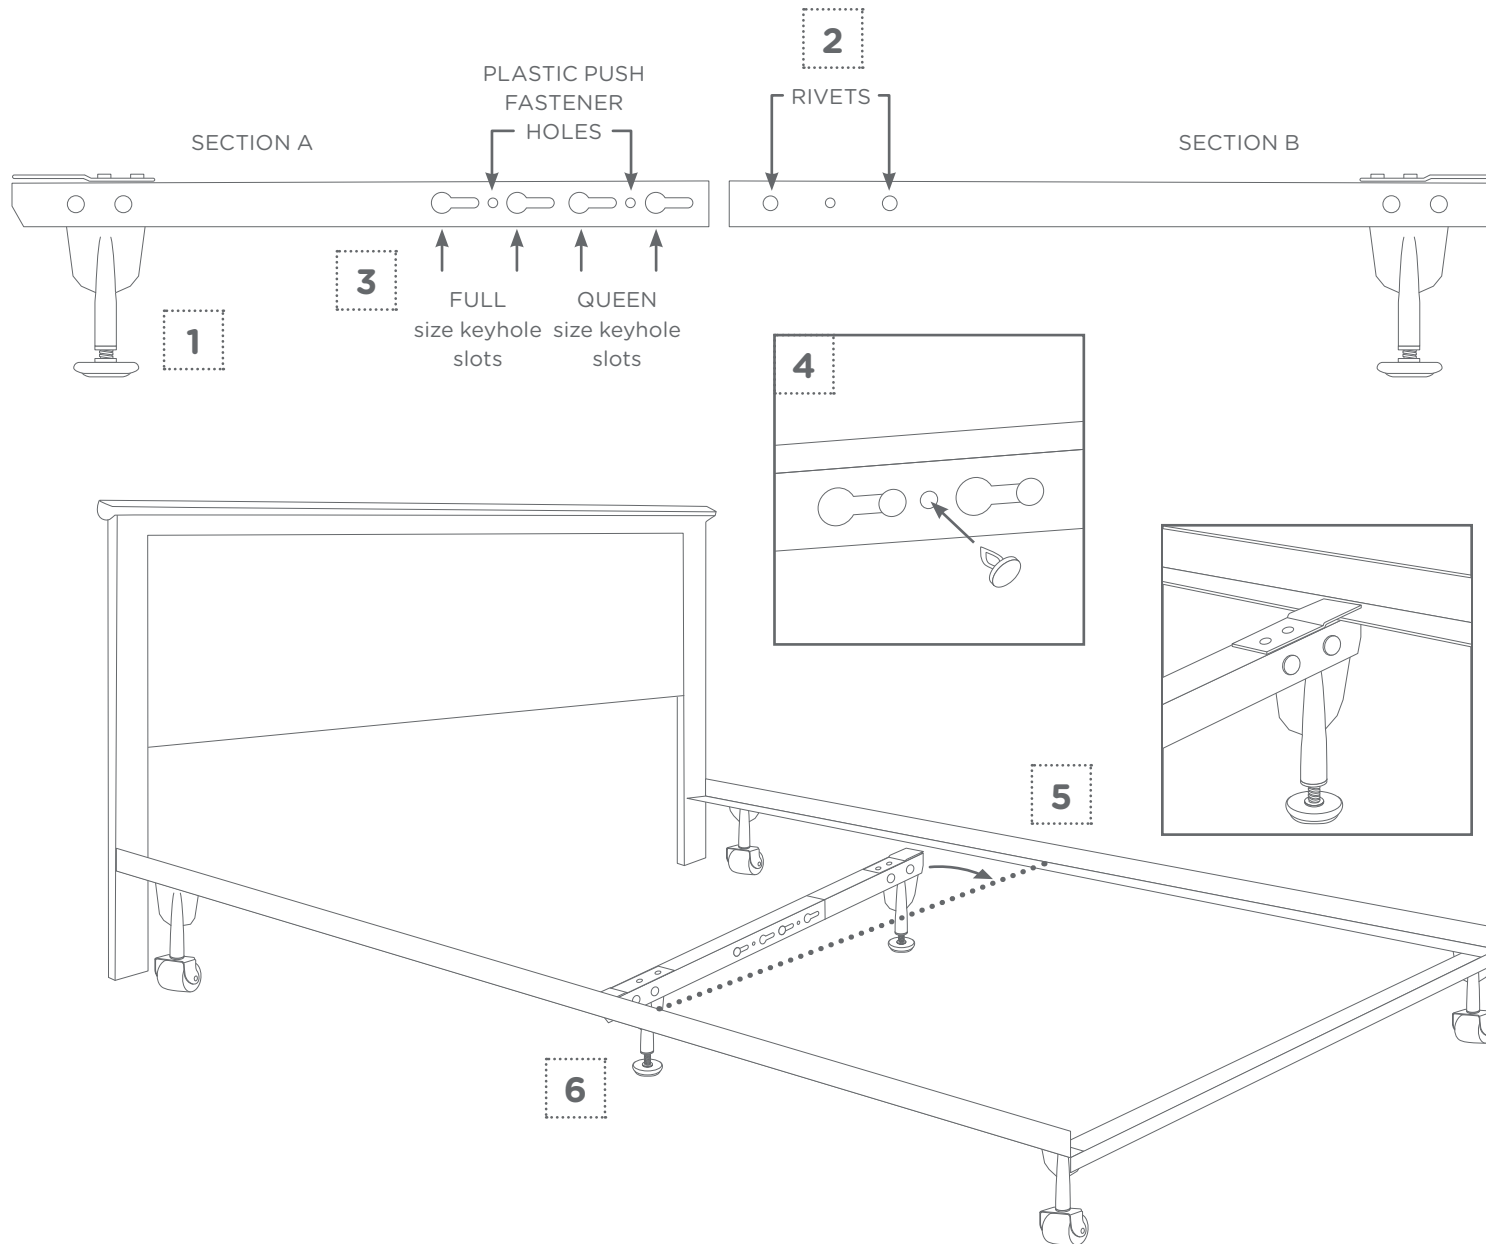

1. Insert nylon socket with glide into legs.
2. Place rivets of SECTION B through proper keyhole slots in SECTION A for desired bed frame width.
3. Pull rivets of SECTION B outward through key hole slots in SECTION A to end of slots.
4. Put plastic push fasteners through hole to lock in place.
5. Swing "BIG LIFT" on to center of side rails of bed frame.
6. Adjust glides to float just off the floor.